



22/12/2011

**Operating instructions to update the Palm Tool Firmware.
Provide yourself with an empty and good quality USB Memory Key.**

1. Connect the USB Memory to a pc, download the original compressed update folder and copy it to the USB Memory.
2. Extract the files from the folder and leave them in the USB Memory together with the original compressed folder.
3. Disconnect the USB Memory from pc following the procedure, switch on the Tool and wait for the program loading.
4. Connect the USB Memory to the Tool, select **Info** and choose **Update Firmware**
5. Wait for the Tool switching off and on again, until the initial view appears.
6. Select **Info** and check if the firmware release is effectively the one you downloaded.
Note : now the files you extracted from the compressed folder have been totally deleted from the USB memory while the compressed folder is still available to repeat the update operation on another Tool.
7. Disconnect the USB Memory with no particular procedure.